

















LED CODES

MODE	LED COLOR	BEEP	ISSUE	FIX
Protection Mode (initial start up)	 Green LED Flashing	1x Short Beep	Low voltage protection	Charge or replace battery
		1x Short Beep + 1x Long Beep	High Voltage protection	Confirm battery is charged on STACYC Smart Charger
	 Yellow LED Flashing	2x Long Beeping	Throttle Speed Input >1V	Replace throttle
	 Red LED Flashing	Long Beeping	Battery temperature protection	Battery is too hot or too cold to operate
	 Red LED Flashing	Long Beep (1 second)	Motor temperature protection	Stop riding, let motor cool
	 Red & Green LED Flashing Mutually	2x Short Beeping	Mos temperature protection	Stop riding, let bike cool
Protection Mode (while riding)	 Green LED Flashing	1x Short Beep + 2x Long Beep	Battery pack low voltage protection	Recharge battery
	 Red LED Flashing	3x Short Beeping + 1x Long Beep	Battery temperature protection	Stop riding, let battery cool
	 Red LED Flashing	Continuous Beeping (0.5 seconds)	Motor temperature protection	Stop riding, let bike cool
	 Yellow LED Flashing	5x Short Beep + 1x Long Beep	Over current protection	Replace throttle
	 Red & Green LED Flashing Mutually	2x Long Beeping	Mos temperature protection	Stop riding, let bike cool
	 Yellow & Green LED Flashing Mutually (continuously)		Motor hall sensor error	Check condition of wires and connectors, clear dust or debris inside motor using compressed air.
Warning Mode	 Yellow LED Flashing	1x Short Beeping (every 2 seconds)	Motor over temperature warning	Stop riding, let bike cool
	 Yellow & Green LED Flashing Mutually (continuously)		Blocked Protection In a condition: throttle >20%, motor rpm <1050rpm and motor current is over 27A	Check condition of gearbox, service drivetrain
	 Red & Yellow LED Flashing Mutually	2x Short Beep + 2x Long Beep	ESC detects abnormal current signal from motor	Check condition of wires and connectors for damage